



FLORENCE LEDIKANT 322

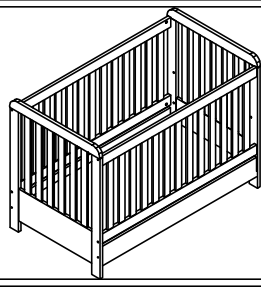

ACCESSORIES LIST

<p>ACCESSORIE NO : 125 M6*60 ALYAN VİDA</p> <p>8 ADET</p>	<p>ACCESSORIE NO : 252 ø15 PLASTİK SİLİNDİRİK SOMUN</p> <p>8 ADET</p>	<p>ACCESSORIE NO : 131 4mm ALYAN ANAHTAR</p> <p>1 ADET</p>	<p>ACCESSORIE NO : 004 ø8x30 KAVELA</p> <p>20 ADET</p>	<p>ACCESSORIE NO : 482 TABAN BAĞLANTI DEMİRİ(M102)</p> <p>4 ADET</p>
<p>ACCESSORIE NO : 121 M6*50 ALYAN VİDA</p> <p>8 ADET</p>	<p>ACCESSORIE NO : 013 ø10 SİLİNDİRİK SOMUN</p> <p>8 ADET</p>	<p>ACCESSORIE NO : 585 CAPLOONBA DAMLA ETİKET</p> <p>1 ADET</p>		

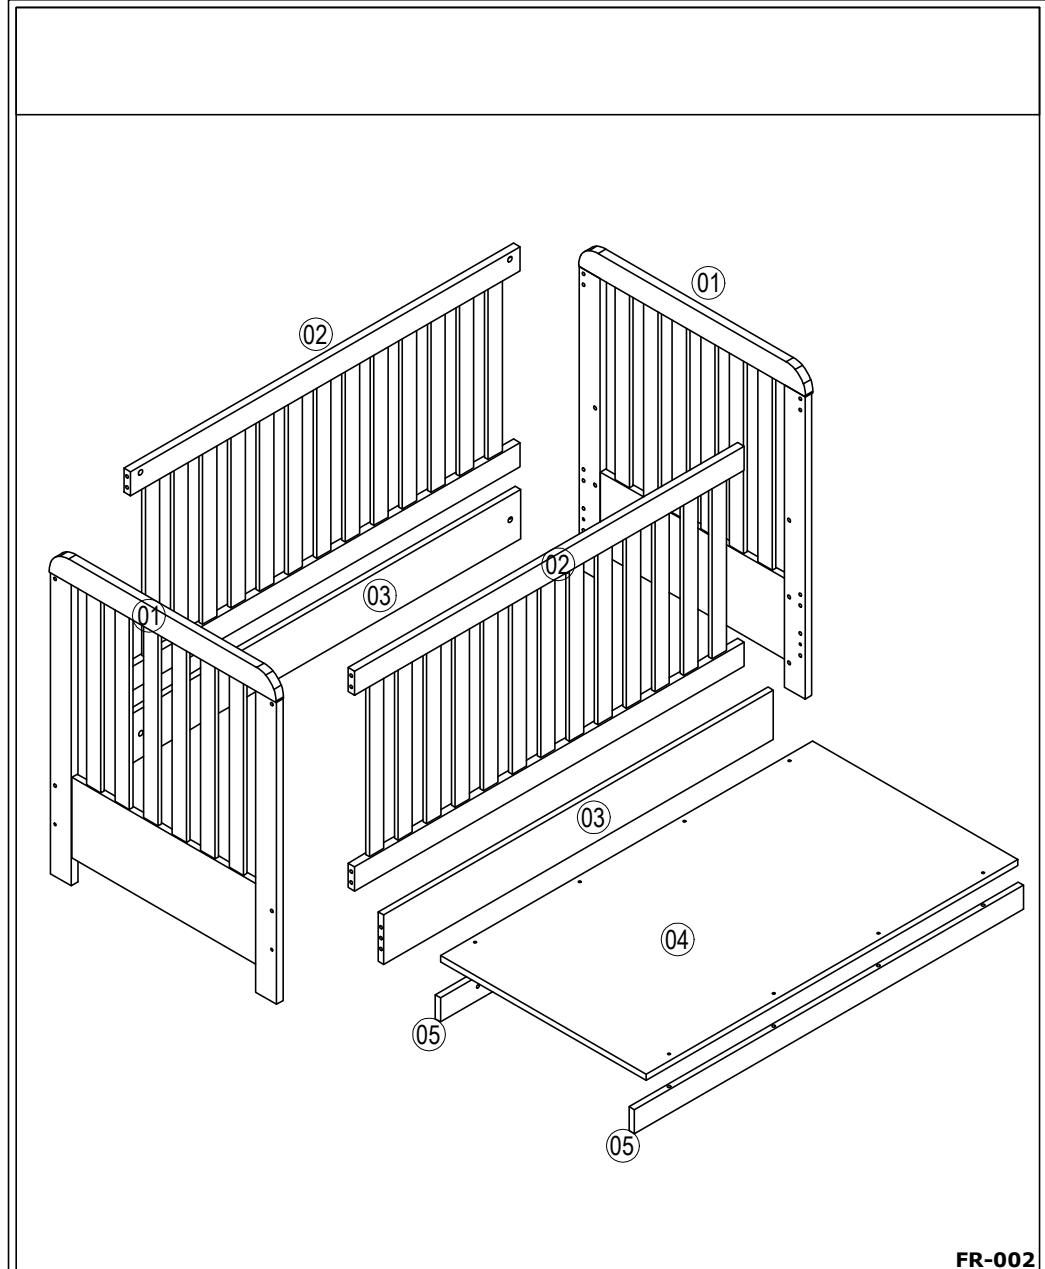


FR-002

NO	ADET/PCS	NO	ADET/PCS	NO	ADET/PCS
01	2				
02	2				
03	2				
04	1				
05	2				


YEDEK AKSESUAR SİPARİŞLERİNİ RESME BAKARAK VERİNİZ. (Örn:ACCESSORIE.NO:008 - RAFIX MİL - 1 Ad.)
PLEASE ORDER THE ACCESSORIES ACCORDING TO THE REFERENCE NUMBER ON THE DRAWING(EXAMPLE ACCESSORIE NO-008 RAFIX MIL 1.PCS.)

YEDEK PARÇA SİPARİŞLERİNİ RESME BAKARAK PARÇA NUMARASINA GÖRE VERİNİZ
PLEASE ORDER THE SPARE PARTS ACCORDING TO THE REFERENCE NUMBER ON THE DRAWING


INSTALLATION STEPS

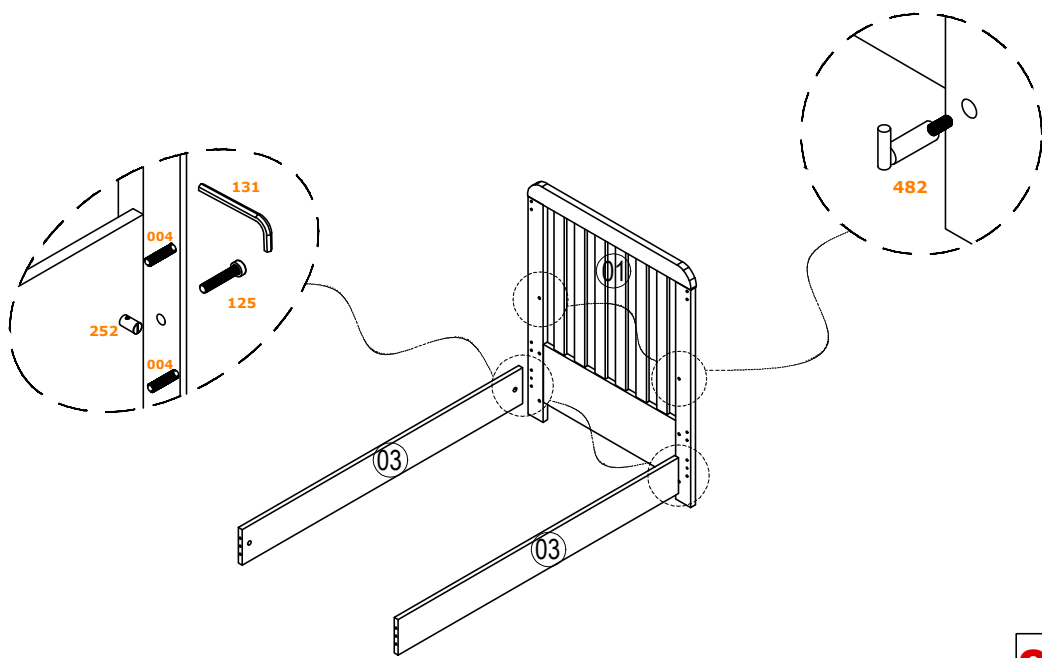


01

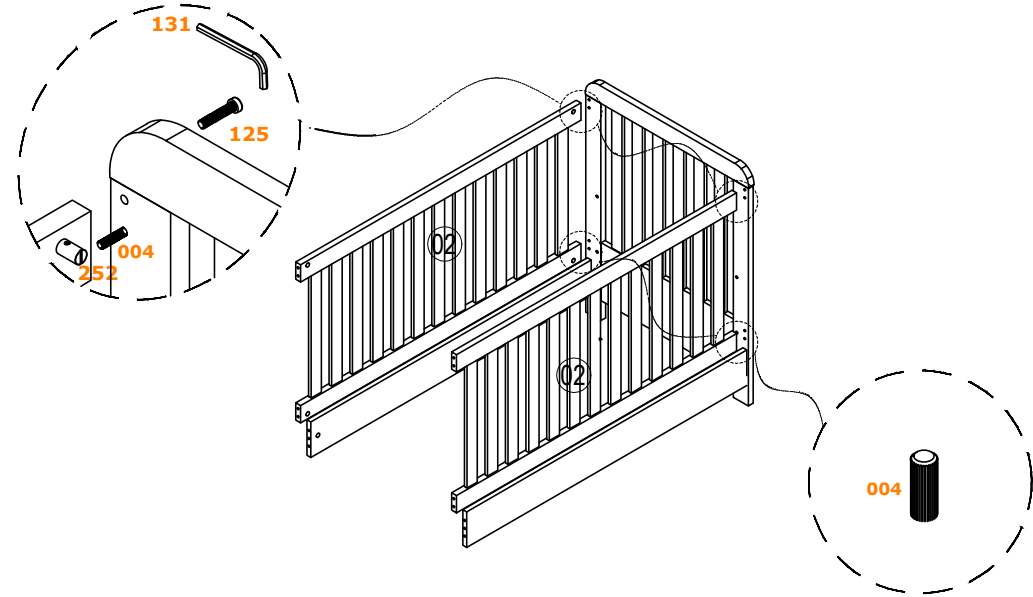

02

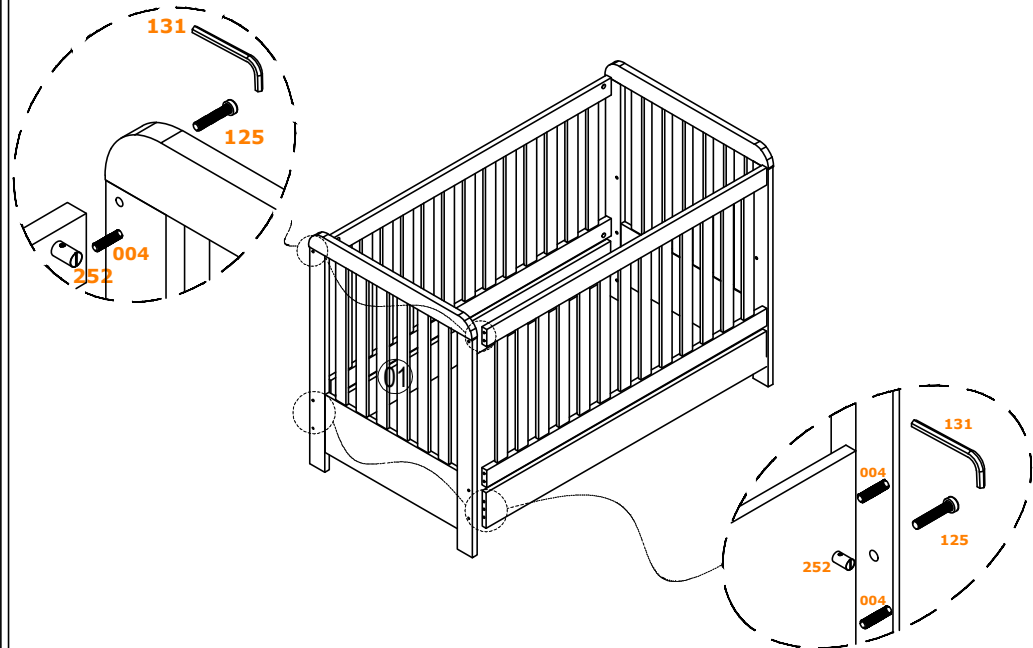

03

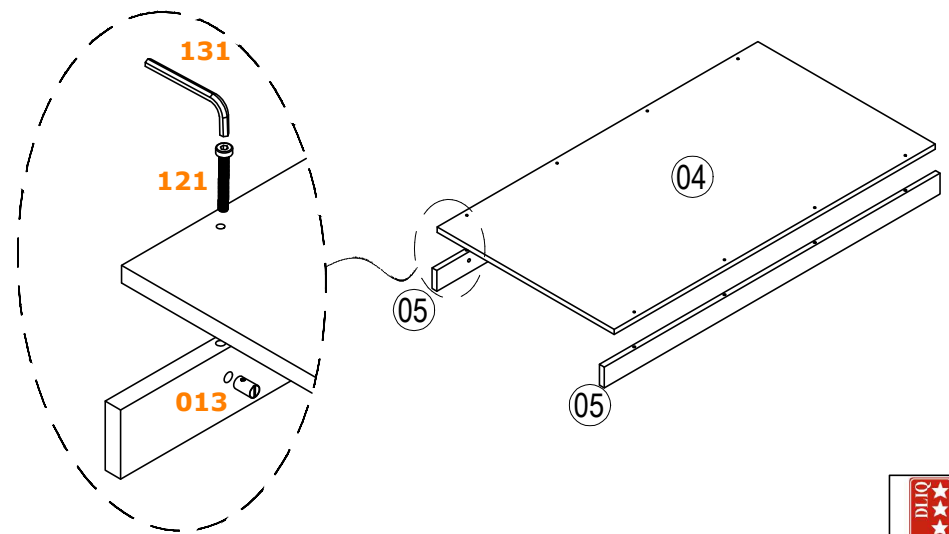

04